

# Setting up TR-069 client on mikrotik hAP ac2

## Prerequisites

Before configuring the TR-069 client, ensure your MikroTik hAP ac2 device has an active internet connection.

## Required Configuration Parameters

You will need the following credentials and settings to configure the TR-069 client in CONTROL:

- **ACS URL:** The endpoint URL where your device will report its status and receive management commands
- **Username:** Authentication username for the ACS URL
- **Password:** Authentication password for the ACS URL

“ **Note:** These credentials should be provided by your CONTROL administrator or obtained from your CONTROL portal settings.

## Configuration Steps

Follow the video tutorial below for step-by-step instructions on configuring the TR-069 client on your MikroTik hAP ac2:

<https://www.youtube.com/embed/o0fW0JeTn4Y>

## Additional Information

The TR-069 protocol enables remote management and monitoring of your MikroTik device through the CONTROL platform. Once configured, your device will automatically establish communication with the ACS server and appear in your CONTROL dashboard.

---

Revision #1

Created 2026-02-13 22:38:07 UTC by ipena@zequenze.com

Updated 2026-02-14 01:08:16 UTC by ipena@zequenze.com